

# v32s Bench



www.omos.ie + 353 45 899 802 OMOS

# v32s Bench



#### DESCRIPTION

Bench with profile cut steel ends and intermediate supports, galvanized and painted. Surface composed of closely spaced steel bars for comfort and fast water run-off after rain.

#### DIMENSIONS Length 1795mm, Width 595mm, Height 450mm.

#### OPTIONS


Choice of RAL colours for powder coating.

Constructed from powder coated galvanized steel, the small profile of the bars and their high frequency create a refined lightweight aesthetic.

The profile-cut steel ends and intermediate supports, connected by high-strength solid steel bars, belie its delicate appearance. The small surface area of the bars ensures moisture dissipates quickly from the bench surface.

The bench can be left free standing or root or tab fixed to the ground.



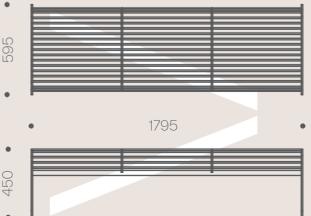

# v32s Bench Fixing Instructions

## TAB FIXED

## FOR AREAS ALREADY PAVED


- Determine the location for the bench. Remove the pavers and excavate two holes at centres 1745mm. The size of the 1. foundation may vary depending on the ground conditions.
- 2. Fill the holes with 35N20 concrete up to 15mm below the level of the underside of the pavers ensuring a good smooth surface finish.
- 3. Allow sufficient time for the concrete to set then apply a layer of dry sand/cement mix over the pad. Compact and adjust to bring this to the level of the underside of the paving.
- 4. Replace the paving slabs and ensure that they are well bedded in.
- 5. Place the bench in the desired location and mark through the fixing holes making sure this is done accurately.
- 6. Remove the bench and drill through the paving slabs into the concrete pad below. Drill following fixing manufacturer's instructions to suit the chosen fixing. Choose a fixing which will accept an M8 SS CSK bolt, either a mechanical anchor (such as RS PRO Stainless Steel Drop In Anchor M8 x 30mm) or an internally threaded fixing designed for chemical fixing (such as Hilti HIS-RN M8xL [length to suit]). IMPORTANT, the depth of the hole must be sufficient to allow the fixing to be fully embedded in the concrete rather than partially in the paver and partially in the concrete.
- Insert the fixings into the ground following fixing manufacturer's instructions. Reposition the bench and screw in M8 7. SS CSK bolt into the 4 no. fixings. Where chemical fixing is used (such as Hilti HIT-HY 150) leave sufficient time to cure before. Tighten the bolts.

## FOUNDATIONS

450

4

The v32s bench can be fixed directly to a concrete slab or to concrete pads beneath paving stones. Foundations must be to engineer's specification.

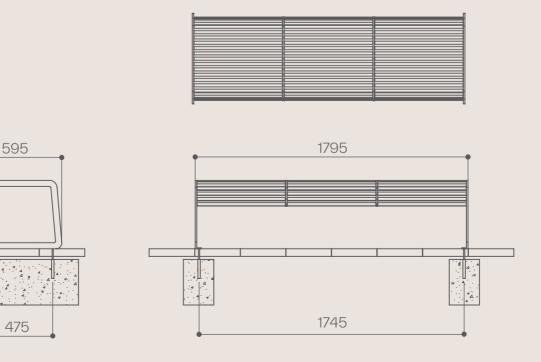

Benches eats +

## OMOS

# v32s Bench Fixing Instructions

## ROOT FIXED


## FOR AREAS ALREADY PAVED


- 1. Determine the location for the bench. Remove the pavers and excavate two holes at centres 1785mm. The size of the foundation may vary depending on the ground conditions.
- 2. Fill the holes with 35N2O concrete up to 15mm below the level of the underside of the pavers ensuring a good smooth surface finish.
- 3. Allow sufficient time for the concrete to set then apply a layer of dry sand/cement mix over the pad. Compact and adjust to bring this to the level of the underside of the paving.
- 4. Replace the paving slabs and ensure that they are well bedded in.
- 5. Place the bench in the desired location and mark around the four threaded fixings.
- 6. Remove the bench and drill 12mm holes through the paving slabs into the concrete pad below. Perform a dry fit to ensure the drilled holes are correctly positioned.
- 7. Using and injectable adhesive anchor such as Hilti HIT-HY 200-A and following manufacturers instructions, inject into the four holes.
- 8. Reposition the bench ensuring it is fully seated. Remove any excess adhesive which may have been displaced by the anchor bars.

## FOUNDATIONS

The v32s bench can be fixed directly to a concrete slab or to concrete pads beneath paving stones. Foundations must be to engineer's specification.



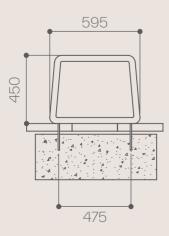

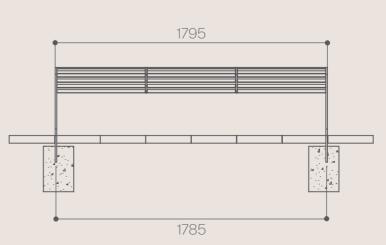

Seats + Benches

## OMOS

# Maintaining Powder Coating



#### MAINTENANCE

Polyester powder coating is a dry finishing process where a polyester resin powder is applied and then baked onto the surface. This creates a durable, protective finish that resists corrosion, weathering, and UV damage. Its versatility allows for a wide range of colour choices, ensuring vibrant and long-lasting aesthetics for diverse applications.

Despite the powder coating durable properties, some care is required to maintain the appearance of the material. The extent to which maintenance is required will depend on a number of factors including environmental conditions, construction activity and level of use.

To maintain the original appearance of the metalwork it should be cleaned regularly using warm soapy water. Avoid the use of abrasive cleaners as they may damage the surface finish.

Should the paint become chipped or scratched it can be touched up using a colour matching metal paint. Where the surface becomes damaged clean with a wire brush or sand, then paint with an outdoor metal paint, Omos recommends Uni 2k paint which can be purchased from most industrial or automotive paint suppliers. We recommend testing on a hidden area to ensure a good colour match before applying to the damaged region. For further advice contact Omos.

www.omos.ie + 353 45 899 802